

Spinal Injection Simulator LF01036U Instruction Manual



WARNING: Products may contain dry natural rubber. *Life/form* Products by Nasco



About the Simulator

The Life/form. Spinal Injection Simulator is designed to facilitate the teaching, demonstration, and performance of spinal anesthesia, spinal puncture, epidural analgesia, caudal analgesia, sacral nerve blocks, and lumbar sympathetic blocks. Every effort has been made to provide absolute realism in the simulator so that the visual and tactile sensations in working with the unit provide a positive transition to patient procedures.

Internal Structure

The Spinal Injection Simulator consists of two basic parts. The first part, or inner core, is a clear lucite window in which the first and second lumbar vertebrae are prominently displayed. It also includes the intervertebral disc, the nerve roots, the ligamentum flavum, and lumbar sympathetic chain.

The second part of the simulator is the functional unit. This incorporates all soft tissue and bony structures from the level of the third lumbar vertebrae down to the tip of the coccyx.

List of Components

- · Fluid Bag with Special Adapter
- 2-oz. Bottle of Lubricant

Procedures That Can Be Performed on This Simulator

As with all *Life/form*. Replicas and Simulators, the Spinal Injection Simulator gives students the opportunity to practice procedures that were never possible with conventional models.

A significant feature of the simulator is a precise 3-5 mm epidural space located between L2 and L5. The instruction of epidural analgesia by the loss of resistance technique can be readily accomplished. Both midline and lateral approaches may be practiced on the simulator. After epidural penetration, students may advance to spinal needles and pierce the dura mater, again experiencing a typical feeling of puncture in the fingertips. The dura can be filled with an aqueous solution. This allows visual confirmation of correct technique when the dura is entered. Fluid will exit through the spinal needle.

Cerebral-spinal fluid measurements can be taken using a standard manometer.

Caudal anesthesia techniques may be practiced on the simulator by inserting needles into the epidural space. The spinous process of the fifth sacral vertebrae is not used in the simulator, leaving a slit-like aperture, the sacral hiatus, between the two sacral cornua.


Lumbar sympathetic and sacral nerve blocks may be practiced with good landmarks. Objective signs of complete sympathetic blocks are not possible with the unit.

A Spinal Replacement Kit (LF01039U) is also offered separately. This kit allows field changing of the simulator skin in less than five minutes. No tools are necessary.

General Instructions for Use

All materials needed for proper function of the Spinal Injection Simulator are provided. The setup procedure is relatively simple. Fill the spinal cord in the following manner:

 Fill supply bag with water, making sure tubing clamp on supply line is closed. Hang supply bag approximately 18" above simulator.

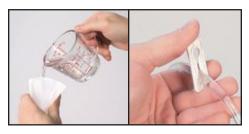

 Lubricate with Life/form. Lubricant Kit (LF00985U) and insert fitting on end of supply bag tubing directly into latex tubing extending above top of simulator.



Open tubing clamp on supply line. Fluid will flow from supply bag through supply line and into the spinal column. When fluid starts coming out of small air vent tubing, close off tube with attached cap.



3. The brace included with the unit is designed to aid in the proper function of this simulator in the two basic positions shown.





4. The simulator is now full and ready for continuous operation. Before starting procedures, lubricate the injection sites with *Life/form*[®] Lubricant Kit (LF00958U). Ivory[®] liquid detergent may also be used. Make no other substitutions. This will reduce surface tension, facilitate entry of the needle, and prolong the life of the simulator.

Modification of Older Units for Spinal Replacement Kit

To properly use the Spinal Replacement Kit, you may need to perform a small modification to your spinal injection simulator. If you have a spinal simulator with a curved window, as shown in the photo below, follow these instructions.

1. Remove the top two locking tabs that are currently on your spinal window.



- 2. Remove any loose material from the window that may have been left from the backing of the old locking tabs.
- 3. Peel the backing from the two locking tabs included in the replacement kit.
- 4. Place the new locking tabs in the same position as the original tabs (see photo above). Press them firmly into place.

The modification is complete and the replacement kit can now be installed.

Instructions for Using Spinal Replacement Kit (LF01039U)

To Disassemble Spinal Injection Simulator

1. Remove tube from hole located on top of window.



2. Lay simulator down — spine up.




- 3. Remove skin flap:
 - a. Put one finger of each hand under skin flap at the base and pull outward until skin flap is free.



b. Remove window. There are three hook-and-loop tabs; two on the front in each corner of the window, and one on the top back of the window. Lift up on front lower tabs of the window and remove.



c. After window is removed, place one finger of each hand at top of skin flap and pull away from body.

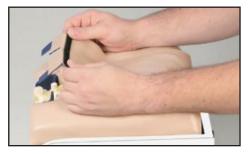

4. Remove foam pad. This will expose spinal bones and yellow ligament.

- 3. Replace new skin flap and window.
 - a. Place top tab of skin flap into simulator.
 - b. Insert bottom of skin flap at the base of simulator. Use one finger in center of lower part of flap to push into place. Replace window by aligning black sensitized tabs and lock into place.
- Replace tube by inserting into hole in top of window. The simulator is now refurbished and ready for use.



Remove yellow ligament by pulling

it away from bone.

Care of Simulator

Store simulator in the accompanying carrying case. Never place simulator on newsprint or any kind of printed paper or plastic, as this leaves indelible stains. The simulator can be cleaned with mild soap and warm water. Use Nasco Cleaner (LF09919U) to remove stubborn stains. Spray soiled area and wipe with soft cloth or paper towels.



Assembly of Removable Parts

- 1. Replace yellow ligament.
- 2. Replace foam pad. There are three alignment holes in back of pad which should cover the protruding bone of the vertebrae.

Cautions

Do not use a hypodermic needle larger than 20 gauge. Keep needles as sharp as you would for a patient. Large bore and dull needles cause excessive wear to unit.

Supplies/Replacement Parts For Spinal Injection Simulator

- LF09919U Nasco Cleaner
- LF00985U Life/form® Lubricant Kit
- **LF01039U** Spinal Replacement Kit with Skin, Musculatures, and Spinal Cord

5.

Other Available *Life/form*. Simulators

LF00698U Adult Injectable Arm (Light) LF00855U Male Catheterization LF00856U Female Catheterization LF00901U Prostate Examination LF00906U Ostomy Care LF00929U Surgical Bandaging LF00957U Enema Administration LF00958U Pediatric Injectable Arm LF00961U Intramuscular Injection LF00984U Breast Examination LF00995U Arterial Puncture Arm LF00999U Pediatric Injectable Head LF01005U First Aid Arm **LF01008U** Intradermal Injection Arm LF01012U Heart Catheterization (TPN) LF01019U Ear Examination LF01027U Peritoneal Dialysis LF01028U Suture Practice Arm LF01034U Suture Practice Leg LF01036U Spinal Injection LF01037U Hemodialvsis Practice Arm LF01038U Episiotomy Suturing Set LF01042U Suture Kit LF01062U Pelvic, Normal & Abnormal LF01063U Stump Bandaging, Upper LF01064U Stump Bandaging, Lower LF01069U Cervical Effacement LF01070U Birthing Station LF01082U Cricothyrotomy LF01083U Tracheostomy Care LF01084U Sigmoidoscopic Examination LF01087U Central Venous Cannulation LF01095U Blood Pressure Arm LF01108U Infant Intraosseous Infusion LF01121U Advanced IV Arm LF01131U Venipuncture and Injection Arm LF01139U Advanced IV Hand LF01142U Auscultation Trainer LF01143U Testicular Exam LF01152U Male & Female Catheter LF01155U Advanced CPR Doa LF01162U Venatech IV Trainer

	NG Tube & Trach Skills
LF01184U	Venatech IM & Sub Q
LF01193U LF03000U	Special Needs Baby CPARLENE® Series
LF030000	Adult Airway Management
LFUSOUIU	Trainer with Stand
LF03602U	Adult Airway Management
EI 000020	Manikin
LF03609U	Child Airway Management
	Trainer with Stand
LF03616U	Child CRiSis ™ Manikin
LF03617U	
	Manikin with Arrhythmia Tutor
LF03620U	PALS Update Kit
	Infant Airway Management
	Trainer with Stand
LF03632U	Child Intraosseous Infusion/
	Femoral Access Leg on a Stand
LF03633U	Child Airway Management
	Trainer Torso
LF03693U	Basic Buddy [®] CPR Manikin
LF03699U	"Airway Larry" Airway
150270011	Management Trainer
LF03709U LF03720U	Infant CRiSis ™ Manikin
LF037200	Baby Buddy [™] Infant CPR Manikin Bariatric CPR Manikin
LF037500	
LF037700	
LF03955U	
LF039550	
LF039550	
EF037030	Manikin
LE03966U	Adult CRiSis™ Auscultation
	Manikin with ECG Simulator
LF04000U	GERI™/KERI™ Manikin Series
LF04200U	
	Infusion
LF06001U	CPR Prompt [®] Adult/Child
	Manikin
LF06012U	CPR Prompt [®] Infant Manikin
LF06200U	
	Rescue Aid
LF06204U	
	Practice Aid

Nasco Fort Atkinson

901 Janesville Avenue, P.O. Box 901 Fort Atkinson, Wisconsin 53538-0901 1.800.558.9595 eNasco.com • E-mail: lifeform@eNasco.com COPYRIGHT © NASCO 1999 PRINTED IN U.S.A. NP 161-83/RV 7-15